


## Installation instructions for AMD Socket A and Intel FC-PGA CPU Cooler

### 1. Thermal Interface Liner

- Remove protective liner

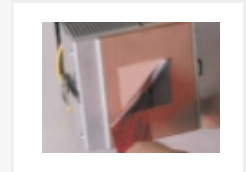


### 2. Ready for Attachment

- Liner removed and thermal material is intact
- Processor is in the socket




### 3. Attach Clip pt. 1

- Align cooler with the socket and attach the clip side opposite to the socket step base

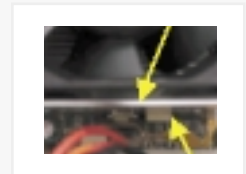


### 4. Attach Clip pt. 2

- Hold the cooler level over the socket and insert a small screw driver into the hook and place the clip over the tab

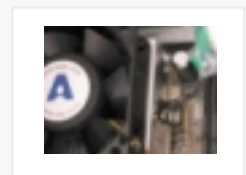


### 5. Attached

- Confirm both sides of the clip are securely fastened to the center tabs of the socket

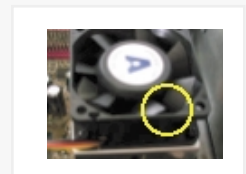

### 6. Connect the Fan power

- Locate the three pin power connector on the board and connect the fan wire

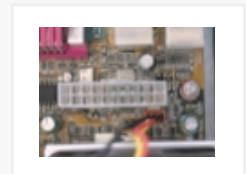

**The CPU Cooler is now ready to operate**